

FLEX™

PROFESSIONAL MOBILE RADIO

USER GUIDE



CONTENTS

Packing list	1	Basic Operations	15
Preparation for operating the radio.....	2	Power On/Off the radio	15
Radio installation	2	Operating Frequency Band Selection	15
Connecting cable power	2	Volume Adjustment.....	15
Radio operation	2	Squelch	15
Base station operation	3	Busy Channel Lockout	15
Replace fuse	4	Wide/ Narrow Band.....	16
Antenna connection.....	4	CTCSS / DCS	16
Accessories connection	5	Channel Selection	16
Speaker Microphone or headset + MIC.....	5	Switch between VFO and Channel Mode.....	16
Microphone	5	VFO Frequency Set	16
Keypad operations.....	5	Zone / Channel Selection.....	16
Radio Controls	6	Monitor	16
Parts description & function applications.....	6	Permanent monitoring	16
LCD Status Icons	9	Repeater / Talk Around	16
LED indicators	11	Emergency Alarm.....	17
Programmable Function keys.....	11	Scan On/Off.....	18
Keypads & ENC (Channel Selector) Operation	12	Roaming On / Off.....	18
Main functions description.....	13	Main menu contains item index	18
Operations for Speaker microphone keypad.....	14		
Transmit / Receive Icons.....	15		

CONTENTS

Menu accessing and operations	19	User_defined Mode	47
PTT Call	19	Function Applications	49
High / low power.....	19	Maintenance and Clean	50
Select the transmitting band	20	General guide for fault handling.....	51
Receive and Answer to a radio call	20	Standard accessories	53
Initiate a call.....	20		
Initiate and receive calls in analog mode	21		
Advanced functions for DMR.....	21		
Menu functions operations.....	22		
Contacts.....	23		
Message.....	25		
Call Log.....	27		
Scan.....	29		
Zones & Channel.....	34		
Local Set	34		
Parameters	37		
Tone Set	41		
Appendix	43		
Record	46		
Device Info.....	47		

Packing list

The following items are included. If any item is missing or damaged, please contact your sales rep.

Item Name	Quantity (pc)	Item Name	Quantity (pc)
Radio unit	1	Handheld Speaker/Microphone	1
Mounting bracket	1	Mounting screw sets	1
DC cable (with 20 Amp fuse)	1		
GPS antenna	1		

Note:

After purchase, please check the items and quantity in the box to ensure everything is correct.

Preparation for operating the radio

Radio installation

For sake of your own and passengers' safeties, please find a safe and convenient position in order to prevent the damage caused by moving car. - You can consider installing the radio in front of the front passenger seat below the panel section or the car trunk. This will prevent your knees and legs crashing the radio in emergency brake. You should install it with good ventilation and avoiding the direct sunlight

1. Install the mounting bracket to the car with using the self-taping screws and flat washers (2 pcs screws each kind).

- Screws can be put upside down (under the dashboard mounting) or upwards the mounting bracket.
- When installing the mounting bracket, please make sure the screw side edge with slots on the bracket are backwards.



Self-tapping screws
(5X16mm)

Flat washers

2. Fixed the radio and then insert the equipped with six angles combination screw and flat washers (each equipped with 2 sides and each side of 1 screw set) and tighten them.

- Please make sure all the screws are tightened to prevent the stent and radio loosing caused by car vibration.

- With the rotatable fixed point on the left and right sides of the vehicle rear bracket, the rotating bracket can tilt the main body at an appropriate angle.



Connecting Cable Power


■ Radio Operation

Make sure to use 12V car batteries. If the radio's power is not enough during transmitting the screen will grow dark and the output power may be significantly decreased. Please do not connect the radio to the 24V power battery.

Note: If the battery is not fully charged or when the engine is switched off, but the battery is still not fully charged, the battery may discharge and there will not be enough power to start the car. In this case, please avoid using the radio in following situation:

1. Use the radio with the DC power cord to directly connect to the car battery and radio within shortest area.

- If you use a noise filter, the metal parts of the car shall be fitted with an insulator to prevent it from touching the car.
 - We do not recommend you use the cigarette lighter socket because some of the cigarette lighter socket will cause big substantial voltage.
 - If you have to connect the power cord through a car chassis or a hole on the car (such as a firewall in front of the passenger compartment), please use the rubber ring to prevent the power cord and remove the fuse holder to pass the power cord through the firewall.
 - The entire power cord must be wrapped in order to keep the heat insulated and insulation from the engine (high pressure) system.
2. After the power cord is already installed, wrap around the fuse holder to make it moisture-proof, including the whole power cord.
 3. Please cut off all wire connections on the negative battery terminal before connecting the radio to prevent the short circuit.
 4. To confirm the connection is correct then connect the power cord to the power supply; red connection to the positive (+), black connection to the negative (-)
- To use the whole power line, please do not cut off excessive parts of power line even if it is longer than desired length. Remember, do not remove the fuse holder from the power cord.
5. Reconnect all wiring connections that were previously disconnected on the negative terminal.
 6. Connect the DC power supply to radio.
- Connect the plug into the socket until you hear a click sound.

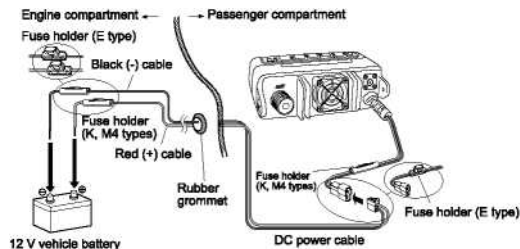


■ Base Station Operation

To use it as a base station, you need a separate 13.8V DC power supply. This power supply is recommended for current capacity above 12A.

Note: Do not connect the DC power to the AC power socket before completing all connections.

1. Make sure that both radios and DC power are off.
 2. Connect the DC power supply to the regulated DC power supply and make sure that the polarity is correct. (Red: positive, black: negative).
- Use the DC power cord to connect the radio to the regulated power supply. Don't connect the radio directly to the AC power socket.
 - Do not use the smaller size of the power cord to make a replacement.
3. Connect the DC power cord to the radio.
- Connect and press the socket together until you hear a click sound.
Fuse holder (E type)

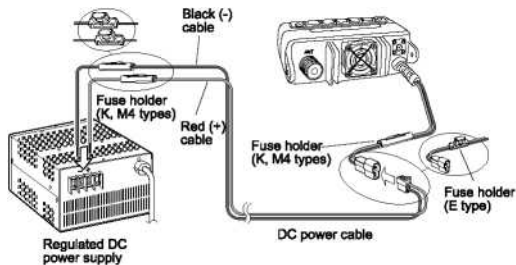

Replace fuse

If the fuse is blown, please find out the cause and then solve the problem. After the problem is fixed then replace the fuse. But if after re-installation the fuse is still blown, please disconnect the power cord and contact the local authorized dealer or authorized service center for assistance.

Fuse position	Fuse rated current
Radio (in DC connector)	10A
Equipped with DC power cord	10A

Note: Please use only the specified type and the rated value of the fuse; otherwise, it might damage the radio.


Antenna connection

Before operation, you must first install and adjust well the antenna. Success installation depends mainly on the antenna type and a correct installation. The radio will have best performance if the appropriate antenna is properly installed. A low loss coaxial feeder line with 500 impedance is used to match the input impedance of the radio.

If the transmission impedance of the feeder line is less than 500 the antenna connection will reduce the effectiveness of the antenna system and will cause interference to the nearby radio and television receivers, radio receivers and other electronic devices, and even damage the radio.

Note:


- If transmitting without an antenna or other matched load line, it could damage the radio. The antenna must connect to the radio before transmitting
- All base stations should be equipped with lightning arrester to reduce the risk of fire, electric shock or radio damage.

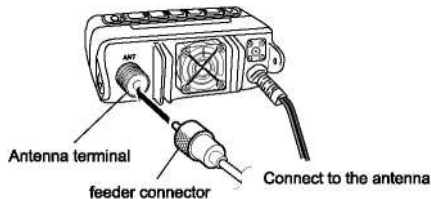

Accessories Connection

■ Speaker Microphone or headset + MIC

1. Please use only the Blackbox OEM microphone and headset options.

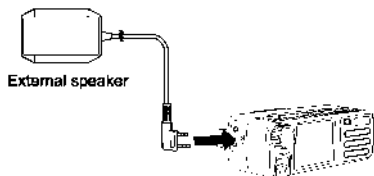


The left side of the walkie-talkie has two jacks for SP and MIC. Please refer to the instructions to determine how to use an external speaker or headset + MIC accessory.

■ Microphone

 
 

 

 
Please insert the provided speaker microphone (with built-in speaker) to the RJ45 jack on left side of the radio to make voice communication. Press the connector until you hear a click sound from the locating plate in place.

Instruction	Operation
-------------	-----------

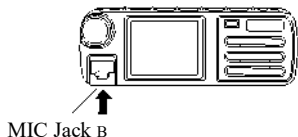


■ Keypad operations

Please follow the key operation described below to simplify the instructions and avoid unnecessary duplication.

 Power Key	Short press the button and release it quickly to power ON/OFF
 Power Key	Long press and hold down the button for 3 seconds to power ON/OFF
 tuning knob Press (button 1) +  Power Key (button 2)	Short press the [Menu] tuning knob button (button 1) and release it; then press button 2 and release it to enter into function menu.
 Rotate tuning knob	Select set options
Press and hold power switch  Power Key	Press and hold the power switch for more than 3s to turn on/off the radio.

Radio Controls

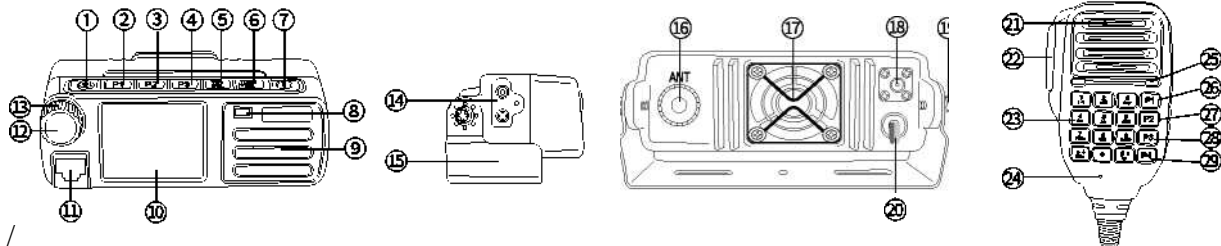

Parts description & function applications

NO.	Part Name	Function description and applications
①	[⏻] Power Key	Press and hold it for more than 3s to turn on/off the radio.
②	P1	Programmable function key 1
③	P2	Programmable function key 2
④	P3	Programmable function key 3
⑤	[VOL / SQL] key Note: SQL is for analog mode only	1) Short press to set the volume of the band with "i" icon. 2) In analog mode, long press to set the squelch level of the band with "i" icon.
⑥	[TONE/T. SEL] key	1) In analog mode, short press and rotate it to select the signaling type of the band with icon. 2) After selecting the signaling type, long press it to change the signaling code / frequency. The TX/RX signaling code/frequency can be set.


NO.	Part Name	Function description and applications
⑦	[B/E] key	1) In Standby, short press to switch between band UHF/VHF. The band with icon is the main band for transmitting or menu set. 2) For operating the band with icon, in menu mode, short press to return to the previous level, and long press to exit menu mode. 3) In Standby, long press to enter the User-defined mode of the main band with icon.
⑧	LED indicator	Used to indicate the RX/TX status, etc.
⑨	Speaker	Used to receive audio from others
⑩	LCD display	Display various working states, and combine with visual icons for easy use and operation;
11	RJ45 (MIC) and PC connection port	1) Connect the original speaker microphone to this port 2) Connect the programming cable here to get connection with the PC for data programming.
⑫	[Menu] key [OK] key [Select] Key	1). In standby, short press to access the menu of the main band with icon. 2). In the current menu mode, short press to be [Menu] key or [OK] key for parameter selection and confirmation.
⑬	ENC selection knob	In standby, rotate the knob to operate and set frequency, channel, menu selection and parameters etc. of main band with icon.
⑭	SP/MIC jacket	For external accessories connection, such as earpiece
⑮	Mounting bracket	For fixing the radio at some place.
16	Antenna port	Install the external antenna to this port. In TX testing, please install a dummy load to replace the antenna. The antenna or dummy load should be with 50* impedance.
⑰	Heat Sink	Cool the internal power tube to avoid too high temperature to damage the related components

NO.	Part Name	Function description and applications
18	GPS antenna port	Install the GPS antenna to this port for GPS receiving.
19	Rack mounting screws	Release the left and right screws to adjust a proper fuselage angle and then re-fasten.
⑳	External power plug	Carefully check the polarity (Red: +, Black: -) and power ratings (DC13.8V /15%) of the power supply before connecting to the radio.
21	Speaker microphone	Used to receive audio from others (Audio output options can be set from the menu option)
22	[PTT] key	Press and then speak into the microphone to transmit; Release it to receive.
23	Numeric Keypad	Used to input frequency / channel number, alias, ID and SMS
24	MIC	Speak to the microphone when pressing the PTT key to transmit; (3-5CM from the mouth)
25	LED indicator of the speaker microphone	In transmitting, LED lights red; if operating on speaker microphone keypad, LED light will be always on.
26	MICP1	Programmable function key 1 of speaker microphone
27	MICP2	Programmable function key 2 of speaker microphone
28	MICP3	Programmable function key 3 of speaker microphone
29	MICP4	Programmable function key 4 of speaker microphone

 
 



 
 


 


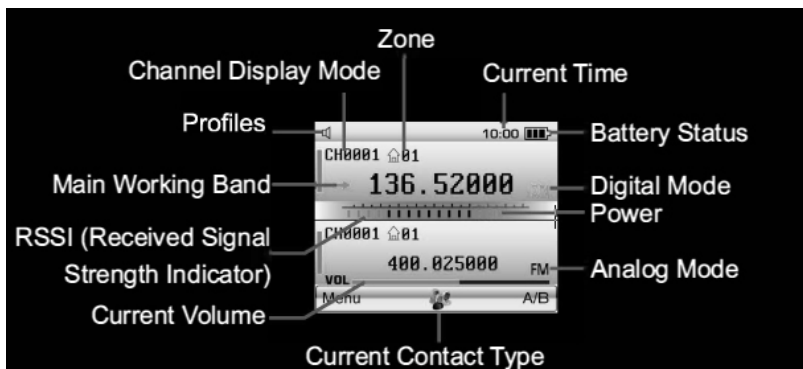



 
 

Note:

For convenient use, there are programmable [P] keys for definition.

LCD Status Icons



Icon	Icon description	Applications and function description
	High Power	6 red bars indicate high power
	Low Power	3 red bars indicate low power
	Standby	White bars indicate the radio being in standby mode
	RSSI	In RX mode, the greener bars, the stronger signal
	Keylock	Appears when the keypad is locked
	Monitor	Appears when monitor is on
	VOX	Appears when VOX is on
	GPS	Appears when GPS is on
	Scan	Appears when SCAN is on
	Emergency Mode	Appears when the radio is in emergency mode.
	Encryption	Appears when Encryption is on
QT	CTCSS	In analog mode, appears when CTCSS is on







Icon	Icon description	Applications and function description
	CDCSS	In analog mode, appears when Reverse DCS is on
	CDCSS	In analog mode, appears when Normal DCS is on
	Prompt Tone on	Appears when profile is in standard mode
	Prompt Tone Off	Appears when profile is in silent mode
	Talk Around	Appears when the radio is in Talk Around Mode
	Roaming	Appears when Roaming is on
	Roaming Lock	For locking current channel in Roaming
	Offset Frequency Negative direction	Appears when RX frequency is higher than TX frequency
	Offset Frequency Positive direction	Appears when TX frequency is higher than RX frequency
	Digital Mode	Indicates the current band working in digital mode
	Analog Mode	Indicates the current band working in analog mode
	Digital/Analog Mode	The current band is in digital/analog auto RX mode. Digital Mode is for main TX
	Analog/Digital Mode	The current band is in analog/digital auto RX mode. Analog Mode is for main TX
	Operating Main Band	The band with this icon indicates that the current band can make a call or is operable and settable
	Time Slot 1	Indicates the working slot of current frequency or channel
	Time Slot 2	Indicates the working slot of current frequency or channel
	Zone	Indicates the working zone of current frequency or channel
	Frequency Mode	Indicates working in frequency mode, can input frequency directly via numeric keypad
	SMS	Appears when received a new message.


LED Indicators

LED indicator	Radio Status
• Green	In receiving
• Red	In transmitting
• Fast Flashing Green	In scanning

Programmable Function keys

If desired, the following terminal features can be preset for programmable keys:

Type	Features	Description
	Radio Revive	Revive a target radio that has been remotely disabled
	Radio Detection	Determine if targeted radio is active
	Radio Kill	Disable targeted radio remotely
	Remote Monitor	Covert activation of targeted radios transmitter without local indicators.
	Encryption On/Off	Turn on/off encryption
	Emergency On/Off	Initiate an emergency alarm mode or call based on programmed preset.
	Record On/Off	Turn on/Off audio Record
	Contacts	Direct access to the contact list
	UHF/VHF Repeat Sw	Turn On/Off UHF/VHF band Repeat mode
	UHF/VHF Monitor Sw	Turn On/Off the speaker audio in the UHF/VHF band Repeat Mode
	Zone Switch	Changes from selected Zone to new Zone

Type	Features	Description
	Permanent Monitor	Always monitor the selected channel until disabled.
	Scan On/Off	Turn scanning on/off
	VOX On/Off	Switch between VOX On and Off.
	Backlight On/Off	Turn backlight On/Off
	Keypad Lock	Switch between keypad lock and unlock.
	High /Low Power	Switch transmit power between high and low power
	Man Down On/Off	Switch between Man Down alarm On and Off (Optional)
	Scan Mode	Select the desired scan mode (switch between SE, TO, CO mode)
	Repeat / Talk Around Selection	Switch between the Repeat and Talk Around Mode
	SMS	Direct access to SMS list
	Monitor	Turn On/Off the radio RX squelch circuit. Receive weak analog signals
	DTMF On/Off	Turn On/Off DTMF
	Squelch Level Adjustment	Select a suitable SQ level for opening the noise suppression circuit of the receiving audio circuit (applicable to products without display)

Note:

◎ Short Press: press and release quickly (programmable range is from 50ms-750ms).

◎ Long Press: press and hold for programmed time length (programmable range is from 500ms-5000ms).

Keys & ENC (Channel Selector) operation

The following keys can be used to quickly achieve the desired function.

Keypad	Status	Operation	Description	
[ENC]	Standby	Short Press	Access to the Menu	
		Long Press	[Keylock] or [Unlock]	
	In Menu Mode	Long Press	[Confirm] or [Menu]	
	Standby	Rotate		Select channel, frequency and other parameters
				Select Menu and other setting parameters
				Select programming items or other parameters;
				Move the editing position of the blink cursor to the left or right
In Menu Mode				
User-defined Mode				
Edit (SMS)				
[5]	Standby	Long Press (3S)	Power On/Off	
[P1]	Standby	Short Press	Preset function based on customization	
		Long Press (3S)	Preset function based on customization	
[P2]	Standby	Short Press	Preset function based on customization	
		Long Press (3S)	Preset function based on customization	
[P3]	Standby	Short Press	Preset function based on customization	
		Long Press (3S)	Preset function based on customization	

Keypad	Status	Operation	Description
[VOL /SQL]	Standby	Short Press	For adjusting the output volume
		Long Press (3S)	In analog mode, adjust the squelch level
/T.SEL] [TONE	Standby	Short Press	In analog mode, choose signaling type
		Long Press (3S)	To select signaling code / frequency after selecting the signaling type, and short press to choose signaling code / frequency for RX / TX
[B/E]	Standby	Short Press	Select the operated Band UHF/VHF make a call or menu operation to
		Long Press (3S)	Operations for Channel/ VFO user-defined mode and storage and other parameters
	Menu Mode	Short Press	Back to the previous level
MIC [P1]	Standby	Short Press	Preset function based on customization
		Long Press (3S)	Preset function based on customization
MIC [P2]	Standby	Short Press	Preset function based on customization
		Long Press (3S)	Preset function based on customization
MIC [P3]	Standby	Short Press	Preset function based on customization
		Long Press (3S)	Preset function based on customization
MIC [P4]	Standby	Short Press	Preset function based on customization
		Long Press (3S)	Preset function based on customization

Main functions description

Classification	Function	Description
Public Functions	Zone	A zone is a group of channels. Support end users to build and expand zones by themselves.
	VFO Mode	In VFO mode, the user can directly input the required frequency through the numeric keyboard
	Channel	Support end users to build and expand channels by themselves, up to 4000 channels, 16 zones.
	Power	The power level is for the transmission power level of the current channel, which can be set to high or low power.
	Emergent alarm	Emergency alarm has the highest priority.
	Scan	When the terminal scans a signal on a channel, it will stay on the channel to listen, so as to understand the current activity status of the relevant team members.
	VOX	If VOX is on, when the voice is detected to reach the transmission condition by the microphone, it will be transmitted automatically. The user can Initiate a call without pressing the [PTT] key.
	Busy channel lockout	Busy channel lockout prohibits transmission and prevents interference to other users when the radio is receiving traffic.

Classification	Function	Description
Public Functions	TOT	When a transmission times out, the terminal will automatically terminate the transmission and issue a warning sound. The user can Initiate a call without pressing the [PTT]key.
	Keyboard lock	Keyboard lock is used to lock keys to prevent inadvertent key operation. The radio may be set to automatic or manual lock mode.
Digital Functions	Private call	Private call is a one-to-one call.
	Group call	Group call is a one-to-many call.
	All call	All call is a call to all contacts on the current digital channel.
	Talk around	When the repeater fails to work or the radio exceeds the coverage of the repeater, it can communicate off-line (RX & TX at the same frequency) to communicate
	Roaming Setting	Roam Mode, RSSI Set, Connect Check Timer, Connect Re Check Timer, Connect Timer
	Roaming	When the radio moves from one site to another, it will automatically find the next available site through roaming.
	Recording	Can record any receive or transmit audio, or receive + transmit audio of the radio
	DTMF RX/TX reminder	Used as the TX PTT prompt tone and RX prompt tone before receiving the voice.

Classification	Function	Description
Digital functions	TDMA direct mode	TDMA direct mode is used to divide a direct channel (simplex) into two time slots to allow efficient channel usage. Multiple parties may share the channel without interference depending on slot setting.
	Analog channel call	An analog call is a call on an analog channel.
Analog functions	Narrow/ Wide Band	Working band for the radio (Narrow band: 12.5KHz, Wide band: 25KHz)
	Squelch Level	It is the signal strength required to adjust the received signal. Normally the higher squelch level, the higher received signal strength is required. Settable squelch level is from 0 ~ 9. Level 0 is normally open, and there is background sound from the speaker once the radio is on. Level 9 is the highest and the required received signal strength is the strongest.
	Busy Channel Lockout	If it is ON, when received the carrier signal, it is prohibited to transmitting when pressing the PTT button.
	Monitor	Monitor allows the user to open the receiver squelch manually to listen to on-channel signals.
	CTCSS	CTCSS code for RX radio must be same as TX radio, so that the audio can be received successfully
	DCS	DCS code for RX radio must be same as TX radio, so that the audio can be received successfully

Operations for Speaker microphone keypad



 





The numeric keypad of the speaker microphone can be used to access the radio functions. It can be used to input frequency/channel number, user alias or ID or SMS. Many characters require pressing a key for several times

Keystrokes

Keypad	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	Note
	,	o	?	!	:	;	"	"	'	'	()	<	>	»																"PY" input mode
	.	'	?	!	-	()	@	/	:	_	;	+	&	%	*	=	<	>	\$	[]	{	}	~	^	#	!		"AB" / "ab" input mode	
	A	B	C																												
	D	E	F																												
	G	H	I																												
	J	K	L																												
	M	N	O																												
	P	Q	R	S																											
	T	U	V																												
	W	X	Y	Z																											
0	Note: in the digital editing mode, a short press of this key enters the value of "0", while long press enters the symbol "+" in the digital, English and Chinese editing mode.																														
兩	Note: in the digital, English and Chinese editing mode, a short press of this key enters the "##H" symbol, and a long press enters a "space".																														
	Note: in the editing mode of Numbers, English and Chinese, a short press of this key inputs the symbol while a long press switches between the editing input mode of English, Numbers, Chinese (pinyin) (" AB "in upper case," ab" in lower case," 12 "in figure," PY "in Chinese pinyin)																														

Transmit / Receiving Icons

The following icon appears on the radio screen to indicate the radio status.

Mode	Type	ICON	Terminal product status
	Private call		Sending a private call
			Receiving a private call
	Group Call		Sending a group call
			Receiving a group call
	All Call		Sending an All Call
			Receiving an All Call
	—		Sending an analog transmission
			Receiving an analog transmission

Note:

In the contact list, user aliases, names, ID numbers, codes, etc can be used.

Basic operation

Power On/Off the radio

ON: Make sure the power supply is connected correctly, long press the key to power on the radio till “Beep sound” is heard (if turned ON). After power is on, the brand logo will appear and “is powering” character shows on the display screen. And the LCD enters in the standby interface.

OFF: long press the [0] key to power off the radio, then the brand logo will appear and “is powering” character shows on the display screen.


Operating Frequency Band Selection

In standby mode, press the [B/E] key to switch to the Band UHF or VHF for operation and set.

Volume Adjustment

For adjusting the volume, short press [VOL/SQL] key, after the volume level is displayed at the upper right, rotate [ENC] key clockwise (increase) or counterclockwise (decrease) to adjust the volume. The green volume scroll bar below will change according to the volume level.

Squelch

When “” icon displays at the upper left of the Band UHF or VHF, set the squelch level of the Band UHF or VHF separately by accessing the menu or long press [VOL/SEL] key. In general, the higher squelch level, the received signal strength is stronger. Settable squelch level range is from “0, 1 ~ 9”. Level 0 is normally open, and there is background sound from the speaker once the radio is on. Level 9 is the highest and the required received signal strength is the strongest.

Busy Channel Lockout

Busy channel lockout prohibits transmission and prevents interference to other users when the radio is receiving traffic.

Wide/ Narrow Band

Set the operating bandwidth of Band UHF or VHF separately by accessing the menu.

CTCSS/DCS


When " **DQT** " icon displays at the upper left of Band UHF or VHF, set the CTCSS and DCS signaling of Band UHF or VHF by accessing the menu or self-programming.

1. In standby, press [Menu] key to access the menu to choose "Parameters".
2. In standby, long press [B/E] key to User-defined item and choose "RX/TX signaling".
3. In standby, press [TONE/T.SET] button, and then choose "Signaling".


Processes:

- ① **Choose the signaling type:** single click [TONE/T.SET] key to choose from QT → DQT — DQI, the signaling icon will display at the upper right of current frequency band.
- ② **Choose the signaling code / frequency:** long press [TONE/T.SET] key to display current signaling code/frequency at the upper right of current frequency band, rotate [ENC] key to choose desired signaling code/frequency and press [Menu] key to confirm. Or press [TONEfr.SET] key to set RX (R:XXXX) or TX (T:XXXX) signaling code/frequency.

Switch between VFO and Channel Mode

In standby mode, when "  " icon displays at the upper left of Band UHF or VHF, access the menu to choose the desired display mode, the selectable modes are VFO/CHN(Channel) /CHN+FREQ/Single band/dual band etc.

VFO Frequency Set


In standby mode, when "  " icon displays at the upper left of Band UHF or VHF, and the current band is in VFO mode, the desired frequency can be entered through the speaker microphone keypad.

Note:

◇ The current frequency can be increased / decreased by pressing the [ENC] knob.

○ For detail user-defined operation, parameters set and storage, please refer to "VFO / Channel" on page 20.

Zone/Channel Selection

When "  " icon displays at the upper left of the current Band UHF or VHF, the following two methods can be used to select the desired zone, channels switching and zone name modification or editing.

1. By presetting the programming key to [Channel Switching] feature.
2. Select [Zone] item by accessing the menu

Note:

○ For detail operation and steps, please refer to "Zone/Channel" on page 38.

Monitor

In standby mode or before pressing the [PTQ] key to transmit, press and hold the preset [Monitor] key to monitor channel activity, or receive weak signals, or confirm whether the current channel is free.

Permanent monitoring

In standby mode, press the preset [Permanent Monitor] key to continuous monitor the current channel activity.

Repeater / Talk Around

When the repeater fails to work, or the radio exceeds the coverage of the repeater but within the call range of other radio users, press the preset

[Repeater / Talk Around] key or set sub-menu "Timeslot / Repeater" thru Parameter in Menu to talk around actively and press [PTT] key to continue the communication. This is the so-called Talk Around.

Note:

O This function is supported in digital mode only;

O For detail operation and steps, please refer to "Timeslot / repeater" on page 41.

Emergency Alarm

The emergency alarm function is mainly used in an emergency situation. In any mode, press the preset [Emergency Alarm] key to initiate an Emergency Call.

©There are 3 Emergency Alarm modes supported:

- Emergency Alarm
- Emergency Alarm & Call
- Emergency Alarm & Voice

An alarm is a type of non-voice signaling that can trigger a prompt to another radio. This function refers to the alarm behavior of the radio after it is activated.


©The alarm has the following types:

- Disable - The radio can't send the alarm signal.
 - Standard - The radio can send the alarm signal with voice & visual prompts.
 - Mute - The radio sends alarm signaling without audio or visual prompts and will not alert to any received audio.
 - Mute with voice - The radio sends alarm signaling without audio or visual prompts but can send signal to the eligible channels.
-

Note:

- O This feature is available in digital mode only.

Scan On/Off

When “” icon displays at the upper left of the current Band UHF or VHF, turn on / off scan by the following two ways.

1. Turn on / off scan by programming [**Scan On / Off**] key.
2. Select the [**Scan**] item by accessing the menu to turn on/off it.

Roam On / Off

If necessary, turn on / off roaming by the following two ways.

1. Turn on / off roaming by programming [**Roam on / off**] key.
2. Select the submenu [**Scan**] item by accessing the menu to enable / disable roaming.

Note:





- ◊ Make sure the “Scan List” is pre-selected before turning on “Scan” or “Roaming” feature, otherwise, none of the scan types will be enabled.
- The radio will work in Band UHF as default when “Roaming” is enabled.
- When “Roaming” is enabled, the radio will start to scan all repeater channels in the “scan list” (TX/RX with inter-frequency), and the non-repeater channels in the “scan list” (RX/TX with same frequency) will not be scanned. If there is no repeater channel in the scan list, the radio will exit the roaming after scanning the current “scan list”.
- ◊ When “Scan” is enabled, the radio will open all the receivable channels in the “scan list”.
- For detailed setting and operation of the “Scan”, please refer to page 33.

Main menu contains item index

Set various functions and parameters by accessing the main menu and submenu of the radio. The menu function options supported by this unit are shown in the table below.

The user-defined [FP] programming keys are function shortcut keys, for specific function application, please pre-program by CPS, or consult the system administrator or local dealer.




 

No.	Icon	Main Menu Item	Available setting items
1		Contacts	Contact List, New contact, Manual Dial
2		Message	Create Msg, Comm Msg, Inbox, Outbox, Draft box.
3		Call log	Dialed Numbs, Received Calls, Missed Calls.
4		Scan	Scan (On/Off), Scan List, Scan Mode, Roam Scan
5		Zone & Channel	Zone List, Modify Name
6		Local Set	Language, Keypad lock, Back Light, LEDs, Display Mode, VOX, Channel Sw, Factory Reset, UHF/VHF Repeater
7		Parameters	TOT, Power, Repeat, Sleep Mode, SQ Level, Band, BCLO, Signaling, Enc Level
8		Tone Set	Profiles, Key lone, Msg Tone, P Call lone, G Call lone, Alert lone, Power ON Tone.

No.	Icon	Main Menu Item	Available setting items
9		Appendix	GPS(Optional), FM radio, Time, DTMF (Optional), Speaker/Earpiece (Optional)
10		Record	Record Set, Record List, Clear Record, Space Info.
11		Device Info	Radio ID, RX Group List, CH contact, Version.
12		User defined Mode	Self-program the channel of current band (CTRL stays) or various parameters of VFO mode. Including: Mode selection, frequency, power, etc

Menu accessing and operations

Access the main menu and submenu options to set or browse various parameters (like message checking, editing and sending, etc) through the following operations and step. If there is access right preset by administrator or dealer, please contact them firstly.

Below icons may appear during menu accessing:

- Icon “” or “” indicate On/Off selection.
- Icon “” or “” indicates selected and executed items.
- Icon “” indicate access to next sub-menu.

Processes:

1. In Standby Mode, press **[Menu]** key to access the menu.
2. Rotate [ENC] knob to select the desired “Main Menu” item and press the

[Menu] key to enter.

3. Rotate [ENC] knob to select the desired “Level 2 Menu” item, and then press the **[Menu]** key to enter.

OR

Rotate [ENC] knob to select and set the current parameter value and press the **[Menu]** key to confirm and return to the previous level.

OR

Press the **[Menu]** key to select “On or Off”.

4. Press [B/E] key to return to the previous level.

5. If needed, continue to browse other menus by repeating steps 2 - 4 or return to the “Main Menu” interface for other operation.

Note:

O No matter the “ — ” is displayed at Band UHF or VHF, the selecting and set for some menu parameters (public functions) work for both bands.

O For details please refer to “Main Functions Description” on page 17.

PTT Call

To ensure an optimal transmission, hold the radio in a vertical position at one to two inches (2.5 to 5.0 centimeters) away from the mouth.

High & Low power

In standby mode, if needed, when “ — ” icon displays at the upper left of the current band to be set, switch radio power by following two ways to extend the service time of the battery.

1. Press the preset [High / Low Power] key to switch between high and low power. The “red” indicator at the bottom of the screen of the current band will change according to the set power level.

2. Access "Power*" through the menu to set the output power level of the radio. After setting, the "red" indicator at the bottom of the screen of the current band will change according to the set power level.

[5Q Note:

O High power gets further communicate distance.

O Low power gets closer communication distance.



O Please refer to the operation of menu "Power" on page 41.

Select the transmitting band

In standby mode, press [B/E] key to switch between Band UHF and VHF for desired transmission, and the current transmitting band will have " — " icon displaying at left of the screen.

Receive and Answer to a radio call

Private calls, Group calls, and All calls can be made to the preset contacts on the current digital channel (All call rights need to be allowed by the dealer), and the methods for initiating and receiving all types of calls are the same. Each digital channel can be preset by the dealer with a "transmission contact" for Private call, group call or call contact.

All call	When initiated an all call, the screen displays:  :	When an all call received, the screen displays:  :
----------	--	---

Notes:

O If the "Tx Begin Tone" and "TX End Tone" for private and group calls are activated, when press [PTT] key of the speaker microphone to make a call, a short prompt tone will be heard indicating that the call is in progress. You can speak clearly into the MIC. And when release the [PTT] key, a short beep sound will be heard indicating that it is ready for receiving.





◊ If "Rx Begin Tone" and "Rx End Tone" for private and group calls are activated, when the other part press the [PTT] key to transmit, you will hear a short prompt tone indicating that the current channel is in receiving. And when the transmitter releases the [PTT] key, you will hear a short beep, indicating that the channel is idle and waiting for your answer.

◊ Please refer to the operation and steps of "Tone Set" on page 43.

Initiate a call

If necessary, a call can be initiated by any of the following ways.

1. Rotate [ENC] knob to select any preset channel, and then press the [PTT] key of the speaker microphone to call.
2. Access the "Contact" list through the menu or press the pre-set "Contact" key to access the list. Select the desired contact by rotating [ENC] knob, and then press [PTT] key of the speaker microphone to make a call.
3. Access "Contacts" through the menu to select "Manual Dial" to input the user ID with the numeric keypad of speaker microphone to the popping up dialog box on the screen. It is used for private calls only.



Call type	Operation method	
	Making call	Receiving call
Private call	In standby mode, press [PTT] key to initiate the call. When a call is initiated, the screen displays:  ;	When a private call received, the screen displays:  ;
Group call	When initiated a group call, the screen displays:  ;	When a group call received, the screen displays:  ;

Note:

Encryption must be enabled on the current channel of your radio before sending encrypted transmission. Only when the target radio has the same key value and key ID with your radio, can the transmitted voice be decrypted.

Please refer to the operation of "Encryption" on page 41. Please refer to the initiating call steps of "Contact" on page 27.

Initiate and receive calls in analog mode

When on the currently preset analog channel, press and hold the [PTT] key to initiate a call to all users, the LCD display screen shows . When receive a call indicated by other users on the current analog channel or monitor is activated, the LCD display screen shows .

Note:

If the transmitter or receiver is with "CTCSS / DCS" code, the other party radio can decode the audio successfully with same "CTCSS / DCS" code only.

Please refer to details of "Signaling" on page 42.

Advanced functions for DMR

Use the dedicated CPS software to enable/disable and preset DMR advanced functions (application) on / off and parameters set.

Remote monitor

Pre-set to prohibit the radio from being remotely monitored by others; or allow other users to remote monitor and set time for continuing to keep the MIC and transmitter on (Time range is from 10s ~ 120s).

Remote Kill

Pre-set to prohibit the radio from receiving "Remote Kill" command sent by other users; or allow the other users to receive and process the "Remote Kill" command to disable the radio. This function can be used to disable the radio when it is stolen or lost.

Radio Revive

Pre-set to restrict the radio from receiving "Radio Revive" command sent by other users; or allow the radio to receive and process the "Radio Revive" command to activate it remotely. This function can be used to enable the radio when it is lost and found.

Radio Detection

Pre-set to prohibit or allow the radio from being remotely detected whether the radio is in communication range or active state without any prompt

Call Alert

Pre-set to prohibit or allow the radio from receiving alert tone to ask for calling back when you are free.

GPS (optional)

Turn on/off GPS and position report feature to report the position information to the preset designated channel at the preset intervals.

Record

Pre-set to prohibit or allow the recording for any of receive, transmit, receive + transmit voice.

DTMF

Pre-set to prohibit sending DTMF tones; or allow to send a DTMF prompt tone when press the [PTT] key to transmit. It can remind the receiver that there is a call need to listen in time.

Encryption

Radios supports AES128/256, DMR tier II standard encryption only.

Programming for encryption level is managed in CPS Software.

Radio has 4 levels of Encryption:

- Low: Register Encryption.
- Mid: Encryption type is AES128
- High: Encryption type is AES256
- Enhanced: Encryption type is CR4.

Notes:

- ◇ DMR Advanced functions (application) apply to digital mode only.
- ◇ For DMR advanced functions (application), please refer to "Menu" operation on page 26.
- ◇ Transmission of remote monitor, Remote kill, Radio Revive, Radio Detection, Call Alert, etc. Please refer to "Application" operation of the "Contacts" on page 27.

Menu function operation

The various functions, applications and parameter configuration of the radio can be check and set by menus, if they are allowed by the dealer or system administrator.

Contacts

The contacts provide the "address book" for the radio. Each entry corresponds to an alias or ID used to initiate a call, as well as operations and applications for DMR advanced functions (Application).

Contact list

Processes:

1. Press the preset [**Contact**] key to access the menu.

OR

1. Access the menu, press [Menu] key and rotate [ENC] knob to select **Contacts**, and press [Menu] key to enter.
2. Rotate [ENC] knob to select the **Contact list**, press [Menu] key to enter and select the desired contact.

0 Press [PT7] key to initiate a call;

0 Press [Select] key to make following options:

Group Call ID:

SendMsg press [Select] key Edit SMS rotate [ENC] knob to choose operation of **SendMsg** (Send Message), **InsertComMsg** (Insert Common Message), **Save, Exit Editor** press [Select] key to confirm -> return back to the previous level;

Private Call ID:

① **Application (Advanced)** press [Select] key rotate [ENC] knob to choose of **Radio Detection, Call Alert, Remote Mon (Monitor), Radio Kill, Radio Revive** press [Select] key to send "success" or "Fail" character pops up on the screen Return to the previous level;

② **Edit (contact)** Press [Select] key rotate [ENC] knob to choose operation of **Number, Name and Save** →* press [Select] key to input number and name or Save press [OK] key to confirm f return to previous level. ③ **Delete** press [Select] key "Are you sure?" pops up on the screen press [OK] key to confirm deletion, or press [Back] key to cancel deletion return back to previous level.

④ **SendMsg** press [Select] key to Edit SMS rotate [ENC]

knob to choose operation of **SendMsg** (Send Message), **InsertComMsg** (Insert Common Message), **Save, Exit Editor** —press [Select] key to confirm the operation return to the previous level.

New Contact

Processes:

1. Press the preset [**Contact**] key to access the contact. OR
1. Access the menu, press [Menu] key and rotate [ENC] knob to select **Contacts**, and press [Select] key to enter.
2. Rotate [ENC] knob to choose the **New Contact**, press [Select] key to enter.
3. Rotate [ENC] knob to choose the desired option and press [Select] key to enter.
 - ① **Number** press [Select] key f edit interface input the numbers with the numeric keypad of speaker microphone press [OK] key to confirm f return back to the previous level.
 - ② **Name** press [Select] key edit interface input the numbers with the numeric keypad of speaker microphone press [OK] key to confirm f return back to the previous level.
 - ③ **Save** press [Select] key to confirm Return back to the previous level

Manual Dial

Processes:

1. Press the preset [**Contact**] key to access the contact.
- OR
1. Access the menu, press [Select] key and rotate [ENC] knob to select **Contacts**, and press [Select] key to enter.
 2. Rotate [ENC] knob to select the **Manual Dial**, press [Select] key to enter the interface for inputting the ID.
 3. Input the ID with numeric keypad of speaker microphone, oPress [PTT]

key to initiate a call.

o Press [OK] key and rotate [ENC] knob to make following options:

- ① **Application** press [Select] key — rotate [ENC] knob to choose operation of **Radio Detection, Call Alert, Remote Mon (Monitor), Radio Kill, Radio Revive** press [Select] to send — “success” or “fail” character pops up on the screen — Return to the previous level;
- ② **SendMsg** press [Select] key to Edit SMS rotate [ENC] knob to choose operation of **SendMsg** (Send Message), **InsertComMsg** (Insert Common Message), **Save, Exit Editor** — press [Menu] key to confirm the operation — return to the previous level.

Private Contacts

Processes:

1. Access the menu and rotate ENC knob to select Contacts, and press [Select] key to enter.
2. Rotate ENC knob to select the **Private Contacts**, press [Select] key to enter the Private Call Contacts List. Up to 200,000 private contacts can be added.
3. Choose the desired private contact by rotating ENC knob, the selected contact ID number will display at the top left of the screen and the serial No of the contact displays at the upper right.

OR

o Long press and hold the [MENU] key for 3 seconds, a dialogue window pops up on the interface.

o Input the first few digits of the private contact ID to search with the numeric keypad, after that press the [MENU] key to confirm, and then the screen jumps to the search results. Rotate ENC knob to choose the desired ID.

4. Press the [PTT] key to initiate a private call.

OR

O Press the [MENU] key -> rotate ENC knob to make the following options:

- ① **Application** — press [Select] key to choose operation of **Radio Detection, Call Alert, Remote Mon (Monitor), Radio Kill, Radio Revive** by ENC knob -> press [Select] key to confirm the operation — “success” or “fail” character pops up on the screen f Return to the previous level;
- ② **SendMsg** -> press [Select] key to Edit SMS — press [Ok] key to choose operation of **SendMsg** (Send Message), **InsertComMsg** (Insert Common Message), **Save, Exit Editor** by ENC knob — press [Select] key to confirm the operation — return to the previous level.
- ③ **Details** — press [Select] key the display shows ID, nick name, name, city, province, country etc information — press [Select] key to confirm — Return to the previous level.

Notes:

O “128Bytes” mode must be selected firstly before writing Private Contacts list, so that details like name, city, province, country, etc information can be checked. But this mode requires a long writing time. Make sure the radio keeps normal power supply during the writing process.

O If “16Bytes” mode is selected before writing Private Contacts list, only contact ID and Nick name can be checked. This mode has a shorter writing time which takes about 10 minutes. Make sure the radio keeps normal power supply during the writing process.

Group Contacts

Processes:

1. Access the menu and rotate ENC knob to select **Contacts**, and press [Select] key to enter.
2. Rotate ENC knob to select the **Group Contacts**, press [Select] key to enter the Group Call Contacts List. Up to 20,000 group contacts can be added.
3. Choose the desired group contact by rotating ENC knob, then the selected contact ID number will display at the top left of the screen and the serial No of the contact displays at the upper right **OR**

0 Long press and hold the [MENU] key for 3 seconds, a dialogue window pops up on the interface.

0 Input the first few digits of the group contact ID to search with the numeric keypad, after that press the [MENU] key to confirm, and then the screen jumps to the search results. Rotate ENC knob to choose the desired ID.

4. Press the [PTT] key to initiate a group call.
5. Press [Back] key to return to the previous level.

RX Group List

If allowed in software, RX Group List can be set On or Off in menu to allow/disable the radio to receive any group call from the receiving group call list when it has same working channel/frequency.

Processes:

1. Access the menu and rotate ENC knob to select **Contacts**, and press [Select] key to enter.
2. Rotate ENC knob to select the **RX Group List**, press [Select] key to enter the RX Group Call Contacts List. Up to 20,000 group contacts can be added.
3. Rotate ENC knob to RX Group List ON/OFF selection.
4. Press [MENU] key to turn it On or OFF.
5. Press [Back] key to return to the previous level.

Message

The radio can receive and send text messages from / to the other radios. The below ways can be used to send messages.

CreateMsg

Processes:

1. Press the preset [Message] key to access the menu.

OR

1. Access the menu, press [Menu] key and rotate [ENC] knob to select **Message**, and press [Select] key to enter.

2. Rotate [ENC] knob to select **CreateMsg** and press [Select] key to enter message editing interface.

3. After editing, press [OK] key to make following options:

- ① **SearchLinkman** — rotate [ENC] knob to choose the contact —press the [PTT] key of the speaker microphone to initiate a call or press [Select] key to send the message — the message sending status pops up on the screen.
- ② **WriteNumber** — input the contact number with the numeric keypad of the speaker microphone — press [OK] key to send the message — the message sending status pops up on the screen;

- ③ **InsertComMsg** (Insert Common Message) press [Select] key rotate [ENC] knob to choose the desired message -* press [OK] key edit or press [Menu] key to choose contact to send.

- ④ **Save** press [Select] key to save the message f return to the previous level;

- ⑤ **ExitEditor** press [Select] key to return to the previous level;

CommMsg

Processes:

1. Access the menu, press [Menu] key and rotate [ENC] knob to select **Message**, and press [Select] key to enter.

2. Rotate [ENC] knob to select **CommMsg** and press [Select] key to enter the common message list or "Empty! Do you want Add?" character pops up on the screen.

- ① In common message list rotate [ENC] knob to select the desired message press [OK] key to make following options:

- ◇ **Display** Press [Select] key to display the full message f Press [Back] key to return to the previous level;

- ◊ **AddCommMsg** press [Select] key input the message with the numeric keypad of speaker microphone → press [OK] key **Save** or **ExitEditor** press [Select] key return to the previous level;
- ◊ **Edit** press [Select] key edit the message with the numeric keypad of speaker microphone →* press [OK] key **Save** or **ExitEditor** press [Select] key to save the message or exit the edition →■ return to the previous level;
- ◊ **Delete** press [Select] key "Are you sure?" pops up on the screen press [OK] key to confirm deletion or press [Back] key to cancel deletion return back to previous level;
- ◊ **Send** Press [Select] key edit SMS and press [Select] key to search a contact or write a receiver ID press [OK] key to send a message return to the previous level;
- ② **Add message** press [Select] key to add new common message / press [Back] key to cancel rotate [ENC] knob to choose operation of **Save** or **ExitEditor** press [Select] key to confirm return to the previous level.

Inbox

Processes:

1. Access the menu, press [Menu] key and rotate [ENC] knob to select **Message**, and press [Select] key to enter.
2. Rotate [ENC] knob to **Inbox**, and press [Select] key to make the following options:
 - ① **Inbox List** press [Select] key rotate [ENC] knob to choose the received message press [Select] key to display full message press [Select] key to perform the following options and processes:
 - ◊ **Reply** press [Select] key edit SMS rotate [ENC] knob to choose operation of **SendMsg**, **InsertCommMsg**, **ExitEditor** press [Select] key to confirm the operation;
 - ◊ **Forward** Press [Select] key search or Write the contacts by Search or

WriteNumber → Press [Select] key rotate [ENC] knob to choose contact or input ID number Press [OK] key to send SMS;

- ◊ **Edit f** press [Select] key to write the message f Press [OK] key rotate [ENC] knob to choose operations of **SearchLinkman**, **WriteNumber**, **InsertCommMsg**, **Save** or **ExitEditor** → press [Select] key to send message or save or exit edition and return to the previous level;
- ◊ **Delete** "Are you sure?" pops up on the screen press [OK] key to confirm deletion or press [Back] key to cancel deletion return back to previous level;
- ② **Delete All** "Are you sure?" pops up on the screen f press [OK] key to confirm deletion or press [Back] key to cancel deletion return back to previous level;

Outbox

Processes:

1. Access the menu, press [Menu] key and rotate [ENC] knob to select **Message**, and press [Select] key to enter.
2. Rotate [ENC] knob to **Outbox**, and press [Select] key to make the following options:
 - Outbox List** →press [Select] key →rotate [ENC] knob to choose the message press [Select] key to display full message press [OK] key to perform the following options and processes:
 - ◊ **Search** →■ rotate [ENC] knob to search the contact * press the [PTT] key to initiate a call or press [Select] key to send the message — the message sending status pops up on the screen;
 - ◊ **WriteNumber** —input the contact number with the numeric keypad of the speaker microphone —press [OK] key to send the message — the message sending status pops up on the screen;
 - ◊ **InsertCommMsg** (Insert Common Message) press [Select] key → rotate

[ENC] knob to choose the message press [Select] key edit or press [OK] key to choose the contact to send. **O Save** press [Select] key to save the message return to the previous level;

O Delete "Are you sure?" pops up on the screen press [OK] key to confirm deletion or press [Back] key to cancel deletion return back to previous level;

O Exit Editor press [Select] key to return to the previous level;

②. **Delete All** →■ "Are you sure?" pops up on the screen press [OK] key to confirm deletion or press [Back] key to cancel deletion return back to previous level;

Draft Box

1. Access the menu, press [Menu] key and rotate [ENC] knob to select **Message**, and press [Select] key to enter.

2. Rotate [ENC] knob to **Draftbox**, and press [Select] key to make the following options:

① **Draft List** press [Select] key rotate [ENC] knob to choose the message press [Select] key to display full message press [OK] key to perform the following options and processes:

◇ **Search** rotate [ENC] knob to search the contact press the [PTT] key to initiate a call or press [Select] key to send the message the message sending status pops up on the screen;

◇ **WriteNumber** Press [Select] key to input the contact ID with numeric keypad of speaker microphone Press [OK] key to send the message the message sending status pops up on the screen;

◇ **InsertComMsg** (Insert Common Message) press [Select]

key → rotate [ENC] knob to choose the desired message → press [Select]

key — rotate [ENC] knob to choose the contact to send.

◇ **Save** — press [Select] key to save the message — return to the

previous level;

◇ **Delete** — "Are you sure?" pops up on the screen — press [OK] key to confirm deletion or press [Back] key to cancel deletion return back to previous level;

◇ **ExitEditor** — press [Select] key to return to the previous level;

②. **Delete All** — "Are you sure?" pops up on the screen — press [OK] key to confirm deletion or press [Back] key to cancel deletion return back to previous level;

Notes:

O If Common Message list is empty, you should pre-program the common messages by CPS software or enter into "**CommMsg**" menu to add messages firstly;

O Hold and long press the key for 3 seconds to change the Input modes in writing and editing messages and other processes. The input modes are AB / uppercase, ab / lowercase, 12 / digits, and PY / Chinese.

O In the process of searching contacts or inputting ID numbers to send SMS, when press the [PTT] key, the radio initiates a call.

Call Log

Information for recent dialed calls, received calls and missed calls can be checked by users thru Call Log menu. Call logs help to manage the recent call activities.

Dialed Calls

Processes:

1. Access the menu, press [Menu] key and rotate [ENC] knob to select

CallLog, and press [Select] key to enter.

2. Rotate [ENC] knob to **DailedNumbs**, and press [Select] key to make the following options:

① **Dialed Numbs List** press [Select] key — rotate [ENC] knob to choose the number — press [Select] key to make the following options and processes:

◊ **View** — Press [Select] key to check the dialed number — Press [Back] key to return to the previous level;

○ **TimeOfCall f** press [Select] key to display the call time and duration information press [Back] key to return to previous level;

○ **SendMsg** — Press [Select] key to edit the message — Press [OK] key → rotate [ENC] knob to choose operation of **SendMsg, InsertComMsg,**

ExitEditor — Press [Select] key to confirm the operation — Return to the previous level;

◊ **Delete** — “Are you sure?” characters pops up on the screen — press [OK] key to confirm deletion or press [Back] key to cancel deletion — return back to previous level;

② **Delete All** — “Are you sure?” characters pops up on the screen — press [OK] key to confirm deletion or press [Back] key to cancel deletion — return back to previous level;

Received Calls

Processes:

1. Access the menu, press [Menu] key and rotate [ENC] knob to select **CallLog**, and press [Select] key to enter.

2. Rotate [ENC] knob to **ReceiveCalls**, and press [Select] key to make the following options:

① **.ReceiveCalls List** press [Select] key to enter rotate [ENC] knob to choose the number →■ press [Select] key to make the following options and processes:

○ **View** → Press [Select] key to check the received call number Press [Back] key to return to the previous level;

◊ **TimeOfCall** press [Select] key to display the call time and duration information press [back] key to return to previous level;

◊ **SendMsg** Press [Select] key to edit the message press [OK] key rotate [ENC] knob to choose operation of **SendMsg, InsertComMsg, ExitEditor** Press [Select] key to confirm the operation Return to the previous level;

○ **Delete** “Are you sure?” characters pops up on the screen press [OK] key to confirm deletion or press [Back] key to cancel deletion return back to previous level;

② **.Delete All** “Are you sure?” characters pops up on the screen press [OK] key to confirm deletion or press [Back] key to cancel deletion return back to previous level;

Missed Calls

Processes:

1. Access the menu, press [Menu] key and rotate [ENC] knob to select **CallLog**, and press [Select] key to enter.

2. Rotate [ENC] knob to **MissedCalls**, and press [Select] key to make the following options:

① **.MissedCalls List** press [Select] key to enter rotate [ENC] knob to choose the number press [Select] key to make the following options and processes:

○ **View** Press [Select] key to check the missed call number f Press [Back] key to return to the previous level;

◊ **TimeOfCall** press [Select] key to display the call time and duration

information press [back] key to return to previous level;

○ **SendMsg** Press [Select] key to edit the message Press [OK] key rotate [ENC] knob to choose operation of **SendMsg**, **InsertComMsg**, **ExitEditor** Press [Select] key to confirm the operation Return to the previous level;

◇ Delete "Are you sure?" characters pops up on the screen press [OK] key to confirm deletion or press [Back] key to cancel deletion return back to previous level;

② **.Delete All** "Are you sure?" characters pops up on the screen press [OK] key to confirm deletion or press [Back] key to cancel deletion return back to previous level;

Scan

Scan, Scan list, Scan Mode and Roaming of the radio can be enabled or disabled by following ways.

Scan (On/Off)

Processes:

1. Press the preset [Scan On/Off] key to turn on/off the scan **OR**
 1. Access the menu, press [Menu] key and rotate [ENC] knob to select Scan, and press [Select] key to enter.
 2. Rotate [ENC] knob to Scan and press [Select] key to enter.
 - ① **.Select List** press [Select] key to enter -* rotate [ENC] knob to choose the list press [Select] key to confirm the selection and return to the previous level.
 - ② **.Scan On/Off** press [Select] key to turn it on or off.
 - ③ **.RoamScan On/Off** press [Select] key to turn it on or off.

Scan List

Processes:

1. Access the menu, press [Menu] key and rotate [ENC] knob to select Scan and press [Select] key to enter.
2. Rotate [ENC] knob to **Scan list** and press [Select] key to enter.
3. Rotate [ENC] knob to the desired scan list and press [Select] key to enter the list.
4. Rotate [ENC] knob to below options:
 - ①. Choose one of the channel, press [Select] to make following options:
○ **Set Prior** press [Select] key to set the channel to be priority "Prior is set" pops up on the screen Return to the channel list, where the current channel displays "P" letter;
◇ **Cancel Prior** press [Select] key to cancel the priority channel "Cancelled" pops up on the screen Return to the channel list, where the "P" letter disappears on current channel;
◇ **Channel Del** press [Select] key to delete the channel from the scan list Return to the channel list;
 - ②. **Channel Add** → press [Select] key to make below options: Zone list rotate [ENC] knob to choose the Zone → press [Select] key rotate [ENC] knob to choose the desired channel press [Select] key to add the selected channel and return to the scan list.

Scan Mode

Processes:

1. Press the preset [Scan Mode] key to choose the scan mode. **OR**
 1. Access the menu, press [Menu] key and rotate [ENC] knob to select **Scan** and press [Select] key to enter.
 2. Rotate [ENC] knob to **Scan Mode** and press [Select] key to enter.

① **Carrier** — when the radio receives an air carrier signal in scanning, it will stay at the current channel for a short time until the carrier signal disappears and continue to scanning.

② **Time** — when the radio receives an air carrier signal in scanning, it will stay at the current channel for a preset short period (time range is 5S-20S) and continue to scanning once the preset period is up.

③ **Search** — when the radio receives an air carrier signal in scanning, it will stay at the current channel and exit the scanning. Unless you restart it.

Notes: Before any scan mode is selected, please make sure the “Scan List” preset in advance, otherwise the scan feature is unable to activate.

When the scan is ON, the radio will start to scan all the receivable channels in the list

1. Access the menu, press [Menu] key and rotate [ENC] knob to select Scan and press [Select] key to enter.

2. Rotate [ENC] knob to **RoamSetting** and press [Select] key to make following options:

① **Roam Mode**→ press [Select] key— rotate [ENC] knob to choose the modes of Auto, Manual and RSSI— press [Select] key to confirm the selection and return to the previous level.

Annexed table 1: Roam Mode description

Roaming Mode	Description
Auto	Once searching an available repeater from the scan list, the radio will lock to the current available repeater and pause auto roaming. Then, it will connect with the available repeater according to the preset Connect Check Timer. If the connection fails after the preset Connect Time is used up, it will restart the strong signal Auto roaming search.
Manual	Users can manually roam to the next available repeater. Once it is on, all repeater channels in the scan list will be waken up to search the nearest available repeaters until finds an available one. Every time the nearest available repeater is found, a Connect Re-check Timer (Repeater Check Timer) will be enabled. Users can also lock the repeater by short pressing the [OK/Select] key. The next available repeater is not necessarily the one with the largest RSSI value in the channels of the scan list.

Roaming

Roaming and Roam Mode can be enabled or disabled by following two ways:

Processes:

1. Press the preset [Roam On/Off] key to turn on/off the roaming. **OR**

1. Access the menu, press [Menu] key and rotate [ENC] knob to select **Scan**, and press [Select] key to enter.

2. Rotate [ENC] knob to Scan and press [Select] key to enter.

① **Select List** — press [Select] key — rotate [ENC] knob to choose the list press [Select] key to confirm the selection and return to the previous level.

② **RoamScan On/Off** — press [Select] key to turn it on or off.

Roam Setting

Processes:

Roaming Mode	Description
RSSI (Strong Signal Roaming)	Once a repeater in the channels of the scan list with RSSI more than preset RSSI threshold value is searched by RSSI mode, the radio will lock to the current channel and pause the strong signal auto roaming. Then it will connect with the current repeater according to the preset Connect Check Timer. If the connection fails after the preset Connect Time is used up, it will restart the strong signal Auto roaming search.

② **RSSI Set**→ press [Select] key to display the current RSSI threshold value— rotate [ENC] knob to adjust the desired value & press [OK] key to confirm the modification— “Set Ok!” pops up on the screen and return to the previous level.

Annexed table 2: RSSI threshold value set

Range (Unit: dBm)	
Maximum	-90dBm
Minimum	-125dBm
Increment	-1dBm

Notes:

○ The received signal strength (RSSI threshold value) is settable. If the RSSI mode is enabled and the searched repeater RSSI value is more than the preset threshold, the repeater’s transmitting signal coverage will be automatically recognized as good, and then the radio will suspend RSSI roaming.

◇ The stopped repeater is not necessarily the one with the largest RSSI value in the channels of the scan list ③. **Connect Check Timer** — press [Select] key to display the current time value(second) — rotate [ENC] knob to adjust the desired connect check time — press [OK] key to confirm the modification—* “Set Ok!” pops up on the screen and return to the previous level.

Annexed table 3: Connect Check Time set

Range (Unit: second)	
Maximum	255
Minimum	0
Increment	1

Notes:

○ When the nearest available repeater is searched by Manual Roaming, the radio will immediately start timing according to the preset dwell time value. If the available repeater is not confirmed by pressing the [OK] key within the preset time, once the timer reaches the preset time, the radio will stop roaming; or restart roaming to find the next available repeater. ④. **Connect ReCheck Timer** → press [Select] key to display the current time value(second) — rotate [ENC] knob to adjust the desired recheck time — press [OK] key to confirm the modification — “Set Ok!” pops up on the screen and return to the previous level.

Annexed table 4: Connect ReCheck Timer set

Range (Unit: second)	
Maximum	255
Minimum	0
Increment	1

Notes:

○ When the available repeaters are searched by Auto roaming or RSSI roaming, the radio is confirmed to lock at the currently available repeater and the roaming is paused. Then, the radio will transmit signals at regular intervals based on the preset Connect ReCheck Timer to connect with the current repeater. If fails to connect with the currently available repeater in preset Connect Timer of transmission (set on the Connect Timer table), the radio will restart Auto Roaming or RSSI Roaming to search any nearest available repeater.

⑤. **Connect Times** — press [Select] key to display the current connect time — rotate [ENC] knob to adjust the desired connect times — press [OK] key

to confirm the modification — “Set Ok!” pops up on the screen and return to the previous level.

Annexed table 5: Connect Times Set

Range (Unit: time)	
Maximum	10
Minimum	1
Increment	1

Notes:

○ No matter which roaming mode is selected, in searching, each repeater channel in the scan list will try to connect with nearby available repeaters based on the preset Connect Times. If the pause channel fails to find the available repeaters within the preset Connect Times, it will continue to scan the next repeater channel from the list till find an available one.

Precautions for roaming

1. Before any scan mode is selected, please make sure the “Scan List” preset in advance, otherwise the scan feature is unable to activate.
2. When the roaming is activated, the radio will scan all repeater channels (TX/RX inter-frequency) only; will not scan channels with same TX/RX frequency.
3. When the roaming is activated, if there is no TX/RX inter-frequency channel (repeater channels) in the scan list, after scanning the current selected scan list, it will exit the roaming function.
4. In roaming searching, if band A is with “ — ” icon, when PTT button is pressed, the radio will stop roaming and return back to preset Scan reply/transmit Mode to initiate a call. It will continue to roam after PTT is released.
5. When roaming is on, the radio is default to scan in the main band (Band A). When the main band (Band A) is in roaming, channel selection is prohibited. However, menu accessing and setting of main band (Band A) still can be made by selecting the “ — ” icon.
6. When the main band (Band A) is in roaming, channel and VFO operation and menu accessing & setting of Band B still can be made by selecting the “ — ” icon display.

Zones & Channel

The following two ways can be used to select and switch in Zones and channels.

Processes:

1. Press the preset [Zone & Channel] key to switch in zones and channels.

OR

1. Access the menu, press [Menu] key and rotate [ENC] knob to select **Zone & Channel** and then press [Select] key to enter.
2. Rotate [ENC] knob to desired zone and press [Select] key to enter.
3. Rotate [ENC] knob to desired channel and press [Select] key to make following options:

①. **Select** — press [Select] key — change the zone and channel —return to the standby interface;

②. **Modify Name** press [Select] key modify the channel name — press the [OK] key to confirm and return to the previous level.

Local Set

If the basic operation and functions of the menu are allowed by software to set and check, below functions are operational thru accessing **Local Set** menu.

Language

Processes:

1. Access the menu, press [Menu] key and rotate [ENC] knob to choose **Local Set**, and then press [Select] key to enter.
2. Rotate [ENC] knob to choose the Language and press [Select] key to enter.
3. Rotate [ENC] knob to choose the desired Language and press [Select] key to change.
4. "Lang is set" pops up on the screen and return back to the previous level.

Keypad Lock

Processes:

1. Access the menu, press [Menu] key and rotate [ENC] knob to choose Local Set, and then press [Select] key to enter.
2. Rotate [ENC] knob to choose **Keypad Lock** and press [Select] key to enter.
3. Rotate [ENC] knob to choose operation of **Auto Lock SW** and **Manual Lock SW** and press [Select] key to switch it on /off.
4. Press [Back] key to return to the previous level

Backlight

Processes:

Press the preset [Backlight on / off] key.

OR

1. Access the menu, press [Menu] key and rotate [ENC] knob to choose **Local Set**, and then press [Select] key to enter.

2. Rotate [ENC] knob to choose **Backlight** and press [Select] key to make the following options and procedures:

① **.BL switch** — press [Select] key rotate [ENC] knob to

choose operation of **BL on, BL off, Auto** — press [Select] key to confirm — return to the previous level.

② **.Brightness** press [Select] key — rotate [ENC] knob to select desired brightness — press [OK] key to confirm — return to the previous level;

③ **.DelayTime** — press [Select] key — rotate [ENC] knob to select — press [OK] key to confirm — return to the previous level;

LED indicator

Processes:

1. Access the menu, press [Menu] key and rotate [ENC] knob to choose **Local Set**, and then press [Select] key to enter.

2. Rotate [ENC] knob to choose LEDs and press [Select] key to enter.

3. Press [Select] key to switch it on / off.

4. Press [Back] key to return to the previous level.

Notes:

O If the LED indicator is OFF, it will not light in receiving and transmitting;

O If the LED indicator is ON, it will light in receiving and transmitting.

Display Mode

Processes:

1. Access the menu, press [Menu] key and rotate [ENC] knob to choose **Local Set**, and then press [Select] key to enter.

2. Rotate [ENC] knob to choose **DisplayMode** and press [Select] key to enter.

3. Rotate [ENC] knob to choose operation of CHN+Name, CHN+FREQ, CHN, and press [Select] key to confirm.

4. "DispMode is Set" pops up on the screen and return to the previous level.

Vox

Processes:

1. Press the preset [VOX] key to turn it on / off.

OR

1. Access the menu, press [Menu] key and rotate [ENC] knob to choose **Local Set**, and then press [Select] key to enter.
 2. Rotate [ENC] knob to choose **VOX** and press [Select] key to make the following options and processes:
 - ① **.Vox Switch** press [Select] key to turn it On or Off;
 - ② **.Vox Level** — press [Select] key rotate [ENC] knob to choose desired level — press [Select] key to confirm — return to the previous level;
 - ③ **.Vox delay** press [Select] key rotate [ENC] knob to choose operation of **OFF, Tran_Rx, Tran_Tx, Tran_RxTx** — press [Select] key to confirm — return to the previous level;
-

Notes:

◊ If VOX is on, when the audio amplitude is detected to reach the preset level, the radio will automatically initiate a call without pressing the [PTT] key

○ The higher sensitivity level, the smaller audio amplitude is required. The smaller sensitivity level, the greater audio amplitude is required.

Channel Switch (Channel Sw)

Processes:

1. Access the menu, press [Menu] key and rotate [ENC] knob to choose **Local Set**, and then press [Select] key to enter.
 2. Rotate [ENC] knob to choose **Channel Sw** and press [Select] key to enter.
 3. Press [Select] key to turn it on / off.
 4. Press [Back] key to return to the previous level.
-

Notes:

If the channel switch is OFF, the radio can't rotate the channel selector to choose the frequency or channel.

Factory Reset

Processes:

1. Access the menu, press [Menu] key and rotate [ENC] knob to choose **Local Set**, and then press [Select] key to enter.
 2. Rotate [ENC] knob to choose **Factory Reset** and the display shows "Are you sure restore factory settings" by pressing [Select] key.
 3. Press [OK] key to confirm factory reset, or press [Back] key to cancel.
-

Notes:

◊ If confirm to restore the factory set, the radio will be restored to the factory initial state. All data like frequencies, channels and etc set by CPS will be completely cleared and can't be recovered.

Parameters

If it is allowed by software, set and check TOT, High / Low Power, Time Slot / Repeat setting, Power Saving mode, Encryption Level and etc. can be made thru **Parameters** menu.

TOT (TIME OUT TIMER)

Processes:

1. Access the menu, press [Menu] key and rotate [ENC] knob to choose **Parameters**, and then press [Select] key to enter.
 2. Rotate [ENC] knob to choose **TOT** and press [Select] key to enter.
 3. Rotate [ENC] knob to choose the **Call Time(S)** and press the [OK] key to confirm.
 4. "Calltime is set" pops upon the screen and the radio returns to the previous level.
-

Notes:

- ◊ Range of Call Time: Off, 20S, 30S, 40S, 50S ~ 500S;
 - ◊ The Call Time is for limiting the time of each call, which can be used to avoid affecting the normal communication of other users due to the long-term transmission of the radio.
-

CQ Power

Processes:

1. Press the preset [Power] key to switch the power between high and low.

OR

1. Access the menu, press [Menu] key and rotate [ENC] knob to choose **Parameters**, and then press [Select] key to enter.
2. Rotate [ENC] knob to choose **Power** and press [Select] key to choose High or Low Power and press [Select] to confirm.
3. "Power is set" pops up on the screen and the radio returns to the previous level.

Slot / Repeat Setting

Processes:

1. Access the menu, press [Menu] key and rotate [ENC] knob to choose Parameters, and then press [Select] key to enter.
2. Rotate [ENC] knob to choose Slot/Repeat Setting, and then press [Select] key make following options and processes:

Settings for Repeater Channel:

- ① **RX DirectSlot** press [Select] key → rotate [ENC] knob

to choose operation of **OFF, Slot 1, Slot 2 f** press [Select] key to confirm → "Set OK!" pops up on the screen — return to the previous level;

- ② **.TX DirectSlot** press [Select] key rotate [ENC] knob to choose operation of **OFF, Slot 1, Slot 2 f** press [Select] key to confirm → "Set OK!" pops up on the screen — return to the previous level;

Settings for channel with same RX/TX frequency:

- ① **Direct Mode Operation** — press [Select] key — rotate [ENC] knob to choose operation of **OFF, Slot 1, Slot 2 f** press [Select] key to confirm — "Set OK!" pops upon the screen — return to the previous level;

Notes:

O Slot / Repeat setting is set according to the channel type that currently accesses the menu (Repeat with different TX/RX frequency or RX/TX with same frequency).

Encryption (ENC Level)

Processes:

1. Access the menu, press [Menu] key and rotate [ENC] knob to choose **Parameters**, and then press [Select] key to enter.
2. Rotate [ENC] knob to choose EncLevel and press [Select] key to enter.
3. Rotate [ENC] knob to choose the desired encryption level or turn it off and press [Select] key to confirm.
4. "Set Ok!" pops up on the screen and returns to the previous level;

Notes:

O If it is allowed by CPS software, enable this function will help to prevent other users from eavesdropping without authorization.

O Although encryption is not a necessary requirement for receiving and transmitting. But the receiver radio must have same encryption method, level, alias and value as the transmitter radio to decrypt the encrypted voices from each other.

Squelch Level (SQ level)

Processes:

1. Access the menu, press [Menu] key and rotate [ENC] knob to choose **Parameters**, and then press [Select] key to enter.
2. Rotate [ENC] knob to choose **SQ Level** and press [Select] key to enter.
3. Rotate [ENC] knob to select the desired level or normally open (Level 0), and press [Select] key to confirm.
4. "Sq level is set" pops up on the screen and the radio returns to the previous level.

Wide / Narrow Band

Processes:

1. Access the menu, press [Menu] key and rotate [ENC] knob to choose **Parameters Setting**, and then press [Select] key to enter.
2. Rotate [ENC] knob to choose **Band** and press [Select] key to enter.
3. Rotate [ENC] knob to select the desired narrow /wide band and press [Select] key to confirm.
4. "Set Ok" pops up on the screen and the radio returns to the previous level.

Busy Channel Lockout (BCLO)

Processes:

1. Access the menu, press [Menu] key and rotate [ENC] knob to choose Parameters Setting, and then press [Select] key to enter.
2. Rotate [ENC] knob to choose **BCLO** and press [Select] key to turn Busy On or OFF
3. Press [Back] key to return to the previous level.

Signaling

Processes:

1. Access the menu, press [Menu] key and rotate [ENC] knob to choose **Parameters**, and then press [Select] key to enter.
2. Rotate [ENC] knob to choose **Signaling** and press [Select] key to enter.
3. Rotate [ENC] knob to select the desired item and press [Select] key to make the following options and procedures: ①. **RX Sub audio** press [Select] key to make the following options and processes:

O **Signaling off** press [Select] key to turn off the CTCSS/DCS code "Set Ok" pops up on the screen and returns to the previous level;

O **CTCSS** — press [Select] key → rotate [ENC] knob to choose the CTCSS code —* press [Select] key to confirm — "Set Ok" pops up on the screen and returns to the previous level;

◊ **DCS** — press [Select] key rotate [ENC] knob to choose the DCS code — press [Select] key to confirm "Set Ok" pops up on the screen and returns to the previous level;

◊ **DCS Reverse f** press [Select] key — rotate [ENC] knob to choose the DCS Reverse code — press [Select] key to confirm — "Set Ok" pops up on the screen and returns to the previous level;

②. **TXSubaudio** → Press [Select] key to make the following options and procedures:

◊ **Signaling off** — press [Select] key to turn off the CTCSS/DCS code — "Set is ok" pops up on the screen and returns to the previous level;

O **CTCSS** → press [Select] key — rotate [ENC] knob to choose the CTCSS code — press [Select] key to confirm — "Set Ok" pops up on the screen and returns to the previous level;

O **DCS** — press [Select] key — rotate [ENC] knob to choose the DCS code press [Select] key to confirm — "Set Ok" pops up on the screen and returns to the previous level;

O **DCS Reverse** press [Select] key — rotate [ENC] knob to choose the DCS Reverse code — press [Select] key to confirm — "Set Ok" pops up on the screen and returns to the previous level;

CTCSS (CTCSS Tail)

Processes:

1. Access the menu, press [Menu] key and rotate [ENC] knob to choose **Parameters**, and then press [Select] key to enter.
2. Rotate [ENC] knob to choose **CTCSSTail** and press [Select] key to enter.
3. Choose operation of **55HZ, 120, 180, 240** and press [Select] key to confirm.
4. "Set Ok" pops up on the screen and returns to the previous level;

Tone Set

If it is allowed by CPS software, set and check the prompt tones by accessing the **Tone Set** menu.

Profiles

Processes:

1. Access the menu, press [Menu] key and rotate [ENC] knob to choose **Tone Set**, and then press [Select] key to enter.
2. Rotate [ENC] knob to choose **Profiles** and press [Select] key to enter.
3. Rotate [ENC] knob to choose **General** or **Silent**, and press [Select] key to confirm the selection.
4. "Profile is set" pops up on the screen and returns to the previous level.

Key Tone

Processes:

1. Access the menu, press [Menu] key and rotate [ENC] knob to choose **Tone Set**, and then press [Select] key to enter.
2. Rotate [ENC] knob to choose **KeyTone** and press [Select] key to make following options and procedures:
 - ① **.KeyRingSW** press [Select] key to turn it on / off;
 - ② **.KeyRingStat** press [Select] key — rotate [ENC] knob to choose the keytone level — press [Ok] key to confirm → "Keytone is set" pops up on the screen and returns to the previous level.

Message Tone (Msg Tone)

Processes:

1. Access the menu, press [Menu] key and rotate [ENC] knob to choose **Tone Set**, and then press [Select] key to enter.

2. Rotate [ENC] knob to choose **Msg tone** and press [Select] key to enter.
3. Rotate [ENC] knob to choose the desired ringtone type or turn it off and press [Select] key to confirm.
4. "Ringtone is set" pops up on the screen and returns to the previous level.

Private Call Tone (PCallTone)

Processes:

1. Access the menu, press [Menu] key and rotate [ENC] knob to choose **Tone Set**, and then press [Select] key to enter.
2. Rotate [ENC] knob to choose **PCallTone** and press [Select] key to make following options and procedures:
 - ① **PCallSW** press [Select] key — rotate [ENC] knob to choose operation of **Rx Begin Tone, Rx End Tone, Tx Begin Tone, Tx End Tone** press [Select] key to tick or cancel it —press [Back] key to return to the previous level;
 - ② **PCallTone** — press [Select] key rotate [ENC] knob to choose the desired ringtone type or turn it Off — press [Select] key to confirm — "Tone is set" pops up on the screen and returns to the previous level.

Group Call Tone(GCallTone)

Processes:

1. Access the menu, press [Menu] key and rotate [ENC] knob to choose **Tone Set**, and then press [Select] key to enter.
2. Rotate [ENC] knob to choose **GCallTone** and press [Select] key to make following options and procedures:
 - ① **GCallSW** — press [Select] key * rotate [ENC] knob to choose operation of **Rx Begin Tone, Rx End Tone, Tx Begin Tone, Tx End Tone** — press [Select] key to tick or cancel it —press [Back] key to return to the previous level;
 - ② **GCallTone** press [Select] key — rotate [ENC] knob to choose the desired ringtone type or turn it Off — press [Select] key to confirm — "Tone is set" pops up on the screen and returns to the previous level.

Alert Tone

Processes:

1. Access the menu, press [Menu] key and rotate [ENC] knob to choose **Tone Set**, and then press [Select] key to enter.
2. Rotate [ENC] knob to choose **Call Alert** tone and press [Select] key to enter.
3. Rotate [ENC] knob to select the desired ringtone type or turn it off and press [Select] key to confirm.
4. "Tone is set" pops up on the screen and returns to the previous level.

Power On Tone

Processes:

1. Access the menu, press [Menu] key and rotate [ENC] knob to choose **Tone Set**, and then press [Select] key to enter.
2. Rotate [ENC] knob to choose **Power on tone SW** and press [Select] key turn it on or off.
3. Press [Back] key to return to the previous level.

Appendix

If it is allowed by CPS software, set and check GPS, FM radio, time, DTMF, HeadSet+Speaker etc. by accessing the **Appendix** menu.

GPS

Processes:

1. Access the menu, press [Menu] key and rotate [ENC] knob to choose **Appendix**, and then press [Select] key to enter.
2. Rotate [ENC] knob to choose **GPS** and press [Select] key to make following options and procedures:
 - ①. **GPS switch** press [Select] key to turn GPS On or Off;
 - ②. **.Upload SW** press [Select] key rotate [ENC] knob to choose operation of **GPGGA, GPGSA, GPGSV, GPRMC** -> press [Select] key to tick or cancel -> press [Back] key to return to the previous level;
 - ③. **.Group Info -*** press [Select] key to enter the following options and procedures:
 - ◇ **GPS map** press [Select] key to display the rough distance between the radio and other members rotate [ENC] knob to choose the calculation unit press [Back] key to return to the previous level;
 - ◇ **GPS RX Msgs f** press [Select] key to display the received message list from others rotate [ENC] knob to check the location information of others press [Back] key to exit f press [Back] key to return to the previous level;
 - ◇ **GPS location** press [Select] key to display the location information of the radio rotate [ENC] knob to check GPS / GL received satellites information and signal strength (white: empty signal, red: weak signal, light blue: available signal) f Press [Select] key to return to the previous level;

◇ **Clear RXMsg** press [Select] key to delete the received messages and return to the previous level;

④ **.GPS Report Chn** press [Select] key to check Zone,

Chn, Send interval on / off information press [Back] key to return to the previous level;

⑤ **.Calibrator** press [Select] key to make following options

and processes:

◇ **Auto** press [Select] key to confirm;

O Manual → Press [Select] key →► Display Time zone and difference list — rotate [ENC] knob to choose the desired time zone — Press [Select] key to confirm — return to the previous level;

Note:

GPS is allowed by software;

Some GPS functions must be pre-set by software before use; Some GPS functions must be positioned successfully before use normally;

Some GPS functions require other users to have GPS function and successfully positioned also before use normally;

The GPS Distance Calculation or the use of some functions is for reference only, which may cause errors due to some unexpected or environmental reasons;

GPS function is optional.

FM Radio

Processes:

1. Access the menu, press [Menu] key and rotate [ENC] knob to choose **Appendix**, and then press [Select] key to enter.

2. Rotate [ENC] knob to choose **FM radio** and press [Select] key to display the FM radio frequency information.

3. Rotate [ENC] knob to manually select the FM radio frequency or seek the FM radio frequency automatically.

4. Press the [Back] key to exit the FM radio mode and return to the previous level. Or press [OK] key to make the following options and procedures:

① **.Save** — press [Select] key to save the current FM radio channel;

① **.FM List** press [Select] key to display the list of saved FM radio frequencies — rotate [ENC] knob to choose the desired frequency — press [Select]

key to make below operations:

◇ **Delete f** press [Select] key to delete the current FM radio frequency or press [Back] key to cancel.

◇ **Play →■** press [Select] key to play the current FM radio frequency or press [Back] key to cancel.

Time

Processes:

1. Access the menu, press [Menu] key and rotate [ENC] knob to choose **Appendix**, and then press [Select] key to enter.
2. Rotate [ENC] knob to choose Time and press [Select] key to make following options and procedures:
 - ① **.Date** — Press [Select] key to display the date and year — rotate [ENC] knob or input the desired date and year via numeric keypad of speaker microphone — press [Ok] key to confirm — “Date is set” pops up on the screen and returns to the previous level;
 - ② **.Time** — Press [Select] key to display the time — rotate [ENC] knob to choose or input the desired time via numeric keypad of speaker microphone — press [Ok] key to confirm — “Time is set” pops upon the screen and returns to the previous level;
 - ③ **.DateForm** — press [Select] key f rotate [ENC] knob to choose the desired date form — press [Select] key to confirm — “Date is set” pops up on the screen and returns to the previous level;

Use GPS Datetime press [Select] key to turn it on or off;

Note:

◊ **Use GPS Datetime** is effective only when GPS function is on and successfully positioned.

DTMF

Processes:

1. Access the menu, press [Menu] key and rotate [ENC] knob to choose **Appendix**, and then press [Select] key to enter.
2. Rotate [ENC] knob to choose DTMF and press [Select] key to make following options and procedures:
 - ① **.DTMF Switch** — press [Select] key to turn it on or off;
 - ② **.DTMF LocVolume** press [Select] key to display current local volume — rotate [ENC] knob to adjust the volume — press [OK] key to confirm “Save Ok” pops up screen and returns to the previous level;

Note:

DTMF code Tone is only used as an alert tone to the local radio and remind the recipient user to receive the call;

DTMF code must be preset by CPS software.

Hand Microphone and Speaker

Processes:

1. Access the menu, press [Menu] key and rotate [ENC] knob to choose **Appendix**, and then press [Select] key to enter.
 2. Rotate [ENC] knob to choose **HandMic+Spk** and press [Select] key to enter.
 3. Rotate [ENC] knob to choose operation of **Spk+HandMic, Loudspeaker, Handmic** and press [Select] key to confirm.
 4. "Set Ok" pops up on the screen and returns to the previous level
-

Note:

1. HandMic+Spk is an option for audio output mode of this radio. **O** If it is Off, neither the external speaker nor the handmic (speaker microphone) has audio output. It requires inserting earpiece to hear the output audio.
O If "HandMic" mode is selected, there is audio output from the speaker microphone, but no audio output from the external speaker.
O If "Loudspeaker" mode is selected, there is audio output from the external speaker, but no audio output from the speaker microphone.
O If "Spk+HandMic" mode is selected, both the external speaker and the speaker microphone have audio output.
 2. The headset audio output at the side accessory socket is not controlled by menu setting; it always has audio output once inserting the headset.
-

Record

If it is allowed by CPS software, set and check record set, recording list, clear record, space info about recording by accessing Record menu.

Processes:

1. Press the preset [Record On/Off] key to turn it on / off.

OR

1. Access the menu, press [Menu] key and rotate [ENC] knob to choose **Record**, and then press [Select] key to enter.
2. Rotate [ENC] knob to make following options and processes:
 - ① **.Record Set** press [Select] key -* rotate [ENC] knob to choose operation of RX record SW, TX record SW — press [Select] key to turn it on or off f press [Back] key to return to the previous level;
 - ② **.Record List** — press [Select] key to display the recording list — rotate [ENC] knob to choose the desired record and press [Select] key to make following options and processes:
 - ◊ **Play** — press [Select] to play the selected recording — return to the previous level after finishing playing;
 - ◊ **Delete** -* press [Select] key — "Are you sure?" pops up on the screen — press [Ok] key to confirm deletion or press [Back] key to cancel deletion and

return to the previous level;

◊ **Information** — press [Select] key to display the detailed information of the recording.

③ **.Clear record f** press [Select] key f “Are you sure?” pops upon the screen — press [Ok] key to confirm deletion or press [Back] key to cancel deletion and return to the previous level;

④ **.Space Info** — press [Select] key to display the recorded time and total recordable time information — press [Back] key to return to the previous level

Notes

The total recording time supported is more than 50 hours. It is supported to purchase additional recording time according to the actual requirement.

Device Info

If it is allowed by CPS software, set and check Radio ID, Rx Group List, CH Contact (channel contact), Version and other information by accessing **Device Info** menu.

Processes:

1. Access the menu, press [Menu] key and rotate [ENC] knob to choose Record, and then press [Select] key to enter.

2. Rotate [ENC] knob to make following options and processes:

① **Radio ID** — press [Select] key to display the Radio ID → rotate [ENC] key to choose or input desired ID with numeric keypad of speaker microphone — press [OK] key to save — “Set ok” pops up on the screen and returns to the previous level.

② **RX Gro up List &** press [Select] key to display the receiving group list — rotate [ENC] knob to check details — press [back] key to return to the previous level;

CH contact — press [Select] key to display the default channel contact information — press [Back] key to return to the previous level;

Version press [Select] key to display the local version information press [Back] key to return to the previous level;

User defined Mode

If it is allowed by CPS software, it is supported to check and modify the parameters of Channel or VFO mode by accessing User defined Mode menu.

Processes:

1. In standby mode, press and hold the [B/E] key for 3 seconds to enter the User-defined mode.

OR

1. Access the menu, press [Menu] key and rotate [ENC] knob to choose **Record**, and then press [Select] key to enter.
2. Rotate [ENC] knob to select the following options (refer to **User defined table**).
3. Press [Select] key to light up the cursor and enter to the editing mode.
4. Rotate [ENC] knob to choose the desired value and press [Select] to confirm and save.
5. Press [Back] key to return to the previous level.

User-defined table

In order	Operation	Options	Confirm	Remarks
Channel Attribution (Working Mode)	Press [Select] key	Digital/Analog/RX:D/A-TX:A/TX:D/A-RX:D	Press [Select] key	For both Analog and Digital mode
RX Frequency		In the available range of the radio		
TX Frequency		In the available range of the radio		
Power		High/Low		
RX BS (Slot)		Off/Slot1/Slot2		
TX BS (Slot)		Off/Slot1/Slot2		
RX Color Code		0-15		
TX Color Code		0-15		
Alarm		On/Off		
Call Alert		On/Off		
Private Call Type		PATCS/OACSU		
Meg Type		PATCS /OACSU		
Permission (TX Policy)		Impolite/ Polite to CC/ Polite to All		
RX Group List		Off/Self-defined		
Encryption		Off / Defined by software		
Default Contacts		Off / Contact List		
Emergency		Off / self-defined		
Scan List		Off/self-defined		
Bandwidth		Narrow/Wide		
TX Subtone Type		Signaling Off/CTCSS/DCS/ DCS Reverse		
TX Subtone (TX Sub Item)		The signal codes of DCS/CTCSS		
RX Subtone Type		Signaling Off/CTCSS/DCS/ DCS Reverse		
RX Subtone (TX Sub Item)		The signal codes of DCS/CTCSS		
Scan List				
Save2SelChn (Save to current channel)		All available channels		
Save2SelChn (Save to selected channel)		All available channels		
				Not available for digital VFO mode
				For Analog Mode only
				Not available for analog VFO mode

Notes

When accessing any sub menu, press the [Back] key to return to the previous level.

Modes of TX and RX in scanning

Set TX and RX call modes in scan list by CPS software.

Scan TX Mode

In scanning, when there is detected active channel or talk group, the radio will stay at the channel for a period of time, which is called "idle time".

① The scan TX modes of the scan list can be set as below:

• Talkback

⊗. If it is "On", when a carrier signal of any channel in the scan list is received in scanning, press the [PTT] key to transmit to the channel within 3S after the received signal disappears.

②.If it is "OFF", the reply is based on the "Scan TX Mode" preset by the programming software.

Notes:

Scan TX Mode:

○ **Current Channel** — reply on the channel that starts the scanning.

◇ **Last Operated Channel** — reply on the channel where the radio stays at last time.

○ **Appointed Channel** — specify the only channel to reply. **Appointed Channel:**

After selecting the channel for replying, if there is carrier signal of any channel in the scan list received in scanning, after the received signal disappears, press the [PTT] key, it will reply on the preset appointed channel.

To ensure the best performance and prolong working life, please acquaint yourself with the following for maintenance and cleaning.

Maintenance

- ⊙ Please do not scratch or puncture the device with hard or sharp object.
- ⊙ Please do not place the device in an environment which can corrode electronic circuits or under direct solar radiation.
- ⊙ Please do not carry the device by its antenna or headset.
- ⊙ Please make sure the SP-MIC plug is covered when not in use.

Clean

- ⊙ Please clean your device regularly by using a dry clean cloth or soft brush to wipe the dust on the surface and on the charger contacts;
- ⊙ The keypads, control knob and housing of the device may be dirty from use. Please use nonwoven wipes to clean them. Do not use chemicals to clean it such as detergent, alcohol, spray or petroleum products, on the device surface or printed labels. Chemicals can damage the housing, display and remove the printing on the labels. Before power on the radio, please make sure the device is dry completely.

Troubleshooting

Malfunction	Analysis of causes	Handling method
Radio fails to power on	Battery is installed incorrectly	Re-install battery
	Battery power lower than preset value	Please change or charge battery.
	Bad battery contacts or contacts in dirty.	Check and clear the battery contacts.
Receive signal decreases, is unclear or is interrupted.	Battery power gets lower.	Please change or charge battery.
	Volume control at low value.	Adjust the volume to be higher.
	Antenna gets loose or antenna frequency is incorrect.	Power off radio, and re-install antenna, or change antenna with right frequency.
	Speaker is blocked or damaged.	Try to clear the outer speaker or contact your dealer.
	Using the radio under poor working environment or electromagnetic interference	Change working environment or shift antenna direction.
Unable to communicate with group members	The current working channel frequency or signaling value is different.	Change channel or reset signaling and frequency to be same as the group members
	The setting of Digital or Analog channel is incorrect.	Reprogram the current digital or analog channel.
	Out of range of group members	Move back within range
Noise or unrelated communications on current channel	Co-channel user interference	Change frequency or channel.
	Channel not programmed with correct signaling	Reprogram radio to correct signaling or change signaling to prevent interference.
Low Audio	The communication distance is too great	Reduce range between users.
	Signals are blocked during to environment such as buildings and terrain.	Reduce range between users or move to unimpeded line of sight.

Malfunction	Analysis of causes	Handling method
Low Audio	Strong local environmental interference.	Move away from interference source.
Failure to obtain GPS position (Optional)	Radio lacks optional GPS feature or satellite view blocked by environment.	Add GPS feature; move to open site with clear view of sky.

FLEX™

PROFESSIONAL MOBILE RADIO

Included Parts



Radio Unit



Speaker Microphone



GPS Antenna



DC power cord



Mounting Bracket



Screws

Genuine
blackbox